

## 12.5mm (1/2") MORTICE LOCK REBATE SET

### Suitable for ERA Sashlocks


To fit a Mortice Lock Rebate Set you will require - a posidriv screwdriver, mallet, chisel and a pencil.

#### Easy fitting guide

**A** Select position of lock on door and chisel out the mortice and rebate.

Place face plate over the lock. Insert the lock into the door using the nylon packing pieces to bring it flush with the door edge.

**B** On the opposite door select the position of the box striker rebate and secure with the screws provided.

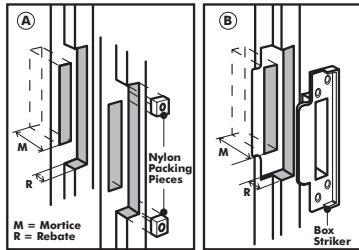

## 12.5mm (1/2") MORTICE LOCK REBATE SET

### Suitable for ERA Deadlocks

To fit a Mortice Lock Rebate Set you will require - a posidriv screwdriver, mallet, chisel and a pencil.

#### Easy fitting guide

**A** Select position of lock on door and chisel out the mortice and rebate.

Place face plate over the lock. Insert the lock into the door using the nylon packing pieces to bring it flush with the door edge.

**B** On the opposite door select the position of the box striker rebate and secure with the screws provided.

