


FITTING INSTRUCTIONS


NEXUS II

FITTING INSTRUCTIONS


- 1** POSITION JIG OVER CENTRED SASH & FRAME & PRE-DRILL

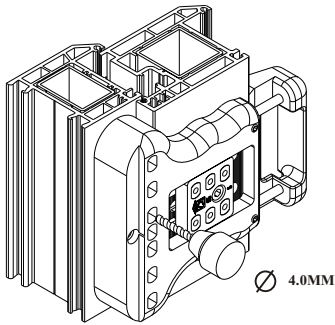


- 2** ADD PACKERS IF REQUIRED & FIX BODY USING 3 X 45mm SCREWS

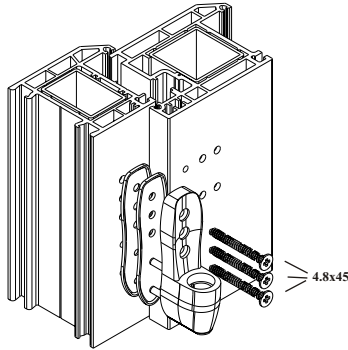


- 3** LOCATE PEG INTO SLOT AND FIRMLY PUSH HINGE PIN INTO BODY

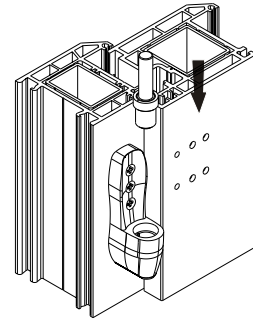


- 4** ENSURE THE ADJUSTER SLEDGE SCREW IS FLUSH WITH THE EDGE OF THE SLEDGE

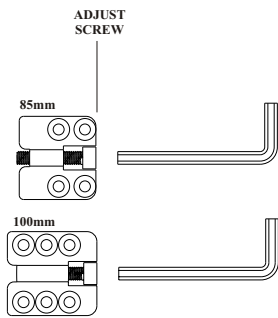


- 5** FIX FLAG TO SASH. USE 25mm SCREWS INTO COVER LEG

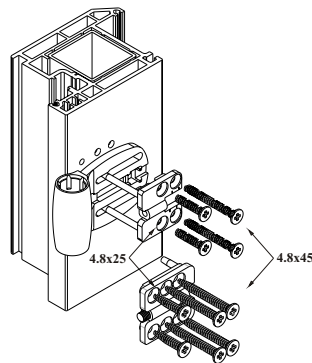


- 6** PRESS COMPRESSION BUSH INTO BODY WITH ALIGNMENT MARK FACING AWAY FROM THE SASH

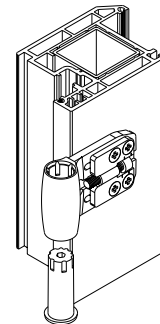


- 7** FIT SASH TO FRAME AND FIX COVER WITH SCREW (INCLUDED)

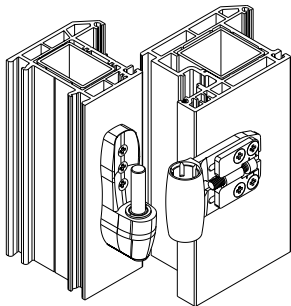

- 8** ADJUST SASH AS NECESSARY

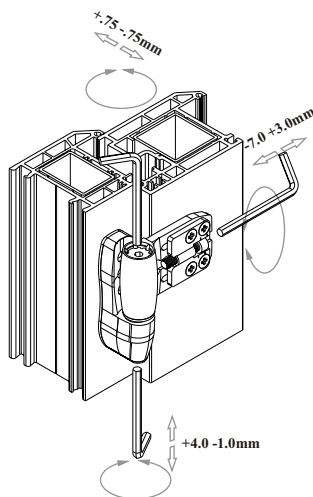

- 9** FIT COVER AND CAPS

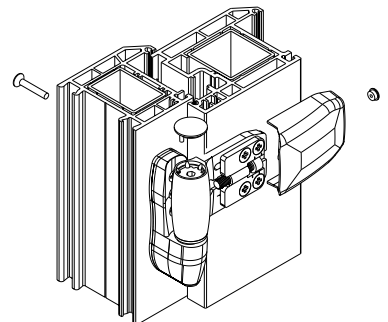

grouphomesafe